

## [2019-August-NewValid Braindump2go 700-070 PDF Dumps and 700-070 VCE Dumps 60Q Offer[Q12-Q22

[August/2019 Braindump2go 700-070 Exam Dumps with PDF and VCE New Updated Today! Following are some new 700-070](#)

[real exam questions:1.](#)2019 Latest Braindump2go 700-070 Exam Dumps (PDF & VCE) Instant

Download:<https://www.braindump2go.com/700-070.html>2.2019 Latest Braindump2go 700-070 Exam Questions & Answers Instant

Download:<https://drive.google.com/drive/folders/1P54oN5tDiFWKHgozWB-G-dxgBS0t7fnT?usp=sharing>QUESTION 12Using

Auto Collaborate with a Cisco TelePresence endpoint, what resolution should the laptop share?A. 800 x 600 60 HzB. 800 x 600

70 HzC. 1024x76860HzD. 1024x76850HzE. 1600 x 1200 60 Hz**Answer: C**QUESTION 13Which Cisco TelePresence

deployment model requires a Session Border controller?A. Intra-CampusB. Intra-EnterpriseC. Inter-EnterpriseD. Multipoint

E. Multi-Cluster Cisco Unified Communications Manager**Answer: C**QUESTION 14What should you do first when Self View

display issues occur?A. Close and re-open Self View.B. Use the Setup wizard to repeat system setup.C. Close and re-open the

share tray.D. Power-cycle the system.**Answer: A**QUESTION 15What are the room power requirements?A. 1.0 kW for the

system, plus 1.0 kW for all table-participant devicesB. 0.95 kW for the system, plus 0.95 kW for all table-participant devicesC.

0.95kW for the system, plus 1.0 kW for all table-participant devicesD. 1.0 kW for the system, plus 0.95 kW for all

table-participant devices**Answer: C**Explanation:Power 0.95kW of power for system. 1.0kW provisioned for all table participant

devices. The IX5000 utilizes NEMA-5-15P electrical outlets for standard US installations.

[http://www.cisco.com/c/en/us/td/docs/telepresence/ix5000/recommendations/ix5000\\_room\\_requirements.html](http://www.cisco.com/c/en/us/td/docs/telepresence/ix5000/recommendations/ix5000_room_requirements.html)QUESTION 16

What three ways can you connect an endpoint to a Static meeting on the Cisco TelePresence Multipoint Switch? (Choose three.)A.

CTS uses One Button to PushB. CTS systems manually dialC. meeting administrator adds CTS systems using the WebUID.

system administrator dials the CTS system into the meeting using the CTS CLI**Answer: BCD**QUESTION 17Which protocol is used

by the Cisco TelePresence Multipoint Switch to instruct Cisco TelePresence endpoints to stop transmitting video during an active

multipoint call?A. RTSPB. RTCPCC. SIPD. H.323**Answer: B**QUESTION 18What should you do when upgrading an existing

immersive room to an IX5000?A. replacing all lightingB. replacing all carpeting or flooringC. repainting the room if mounted

items are removedD. removing acoustic tiles**Answer: C**QUESTION 19What should you do first when the cameras are blurry?A.

Close and re-open Self ViewB. Use the Setup wizard to repeat system setup.C. Close and re-open the share tray.D.

Power-cycle the system.**Answer: A**QUESTION 20What is the proper order of steps for installing an IX5000?A. Perform cable

routing, install display frames, install tabletops, and install the codec.B. Install tabletops, perform cable routing, install display

frames, and install the codec.C. Install display frames, install the codec, perform cable routing, and install tabletops.D. Install

display frames, install tabletops, perform cable routing, and install the codec.**Answer: C**Explanation:Installation Quick Reference1.

Move material and unpack (2 people required)2. Install the lower display frames (2 people required)3. (Systems that include seismic

brackets only) measure, drill for, and install the seismic brackets (see the "Installing the Seismic Bracket" chapter on page C-1) (2

people required). Note that this step adds extra time to the installation.4. Install the upper display frames (2 people required)5. Install

the cable runner6. Install the upper crossbars, rear kick plates, and toe caps7. Install the codecs, PDUs, subwoofer, speakers, and

optional endpoint switches into the endpoint structure Note: The switches in the endpoint structure are optional items. The switches

in the table legs to connect the Touch 10 device(s) are required for the Touch 10 device(s).8. Install the table legs and electronic

equipment (Ethernet/power modules for table legs, microphone connector (MC), PoE switch) for the front row table, and begin

cabling procedures for the table (2 people required for some steps)9. Perform cable routing for all installed equipment (codecs,

PDUs, subwoofer, and speakers for the endpoint structure, and power/ laptop connectivity and PDUs for the table legs) AND place

the cables for the light panels and camera10. Install the displays, light panels, and camera, including cabling11. Install the front kick

plates and toe caps12. Install the front row tabletops (2 people required)13. Install and cable the microphone bars, mute buttons,

retractors/presentation cables14. (IX5200 systems only) install and cable the second row table (2 people required for some steps)15.

Install the PET, fascias, display trim and thermoformed outer panels (2 people required)16. Install software, register endpoint to

Unified CM, perform first-time setup, run test calls17. Room cleanup

[http://www.cisco.com/c/dam/en/us/td/docs/telepresence/ix5000/assembly\\_guide/ix5000\\_install\\_guide.pdf](http://www.cisco.com/c/dam/en/us/td/docs/telepresence/ix5000/assembly_guide/ix5000_install_guide.pdf)QUESTION 21How

many presentations can be shared in a direct IX5000-to-IX5000 call?A. twoB. threeC. fourD. one**Answer: A**

Explanation:Explanation:On an IX-to-IX point-to-point conference, you can share up to two presentation streams - for example, one

presentation content source and one whiteboard source. If hosting a meeting locally with no videoconferencing, you can share up to

three presentation streams.

[http://www.cisco.com/c/en/us/td/docs/telepresence/ix\\_sw/8\\_x/admin/guide/ix\\_8\\_admin\\_guide/ix\\_sw\\_features.html](http://www.cisco.com/c/en/us/td/docs/telepresence/ix_sw/8_x/admin/guide/ix_8_admin_guide/ix_sw_features.html)QUESTION

22 If a single microphone fails, you should first test cabling between which two points?  
A. the TDM and the codec  
B. the microphone bar and the Touch 10  
C. the microphone bar and the codec  
D. the microphone bar and the TDM  
Answer: D  
Explanation: If the problem affects all mic bars, check the cabling between the TDM and the codec (the TDM is located in the first and, if applicable, second row cable management panels). If the problem is with a single mic bar, check the cabling between the mic bar and the TDM.  
[http://www.cisco.com/c/en/us/td/docs/telepresence/ix5000/first\\_time\\_setup/ix5000\\_first\\_time\\_setup.html](http://www.cisco.com/c/en/us/td/docs/telepresence/ix5000/first_time_setup/ix5000_first_time_setup.html)  
!!!RECOMMEND!!!  
1. |2019 Latest Braindump2go 700-070 Exam Dumps (PDF & VCE) Instant Download: <https://www.braindump2go.com/700-070.html>  
2. |2019 Latest Braindump2go 700-070 Study Guide Video Instant Download: YouTube Video: [YouTube.com/watch?v=0t8nue58PGY](https://www.youtube.com/watch?v=0t8nue58PGY)